
## Aervoe® #800/801 Vers-A-Striper


## **ASSEMBLY**

- 1. Remove unit from carton.
- Loosen the wing nut that secures the upper handle to the lower handle assembly and the two wing nuts that to secure the lower handle assembly to the body of the unit.
- 3. Raise upper handle in line with the lower section and tighten the wing nut.
- 4. Position the lower section connection arms on the body and fasten with the wing nuts at the bottom edge of the unit and tighten the wing nuts.

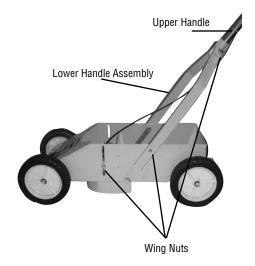

## **OPERATION**

- 1. When viewing from the front of the unit, insert a can of Aervoe Striping Paint in the inverted position on the left side of the carrier assembly.
- 2. Slide the can into position under the two locking spring arms.
- 3. Evacuate contents of the can by squeezing the trigger.
- 4. To vary the width of the sprayed line, loosen the two carrier assembly wing nuts and raise the assembly for a wider line or lower it for a narrower line. Tighten the wing nuts when the desired line width is achieved. It is best to test the unit for line width compliance on a piece of cardboard prior to actual operation.
- 5. A full case of Striping Paint may be carried on the unit in the space available.
- When spraying is complete, remove the can by sliding to the left in the carrier assembly and lift out.

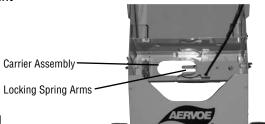



Aervoe Industries Incorporated
Gardnerville, NV 89410
800-227-0196
www.aervoe.com